

Travel Lock Installation




Travel Lock is made up of four parts.

- 1) Lock
- 2) Screw Collar
- 3) Screw
- 4) Tab

- 1** Working from the outside of shower, mark the following location on the **Magnetic Door Stop (A989)**:
 - vertical placement - center with handle;
 - horizontal placement - 5/16" from edge of door stop.

Drill mounting hole in the magnetic door stop (A989), using a **1/8" drill bit**.

Do not drill through to back surface of door stop.

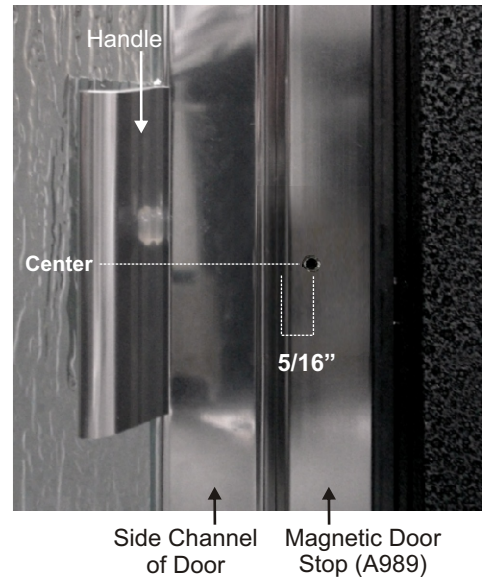

- 2** Place **Screw Collar** into recessed area of **Lock**, with stem of screw collar fitting into hole of lock as shown in parts above.

Secure lock to door stop using screw provided.

Close cap of lock to conceal screw.

- 3** Peel adhesive from **Tab**. Position tab on side channel of door panel, directly across from lock to serve as a contact surface for lock.

